

4 input acquisition module for mV or Thermocouple Z-4TC-D

GENERAL SPECIFICATIONS

- Interface for PLC on standard digital I/O (only DC).
- Input for thermocouple and low voltage circuit.
- Sampling time settable at 450 ms @ 14 bit + sign, 240 ms @ 13 bit + sign.
- Protection of inputs of up to 60V.
- 1500V AC input insulation with respect to remaining low voltage circuits.
- Facilitated wiring of the power supply and the serial bus by means of a bus that can be housed in the DIN guide as an alternative to the terminals.
- Connection distance up to 100 mm (with shielded cable).

TECHNICAL SPECIFICATIONS

Power supply:	19-40Vdc, 1928Vac	50-60 Hz	max 2.0W; 1.5W @ 24Vdc
Communication port:	RS232 serial port on front panel can be used for the control and set-up of the module.		
PLC communication:	3-wire synchronous serial: CLOCK, DATA, STROBE, standard levels 24V pnp.		
Voltage input:	bipolar with 80 mV f.s., input impedance > 10 Mohm, resolution 5 uV (10 uV @ 14 bit).		
Thermocouple input:	J,K,R,S,T,B,E, and N type; resolution 5 uV (10 uV @ 14 bit), input impedance > 10 Mohm, TC cut-off detection.		
Errors:	Calibration	Linearity	Thermal stability
Voltage:	0,1% o.r.	0,02%	0,01% /°C
Thermocouple J,K,E,T:	0,1% o.r.	1°C beyond 0°C	0,01% /°C
Thermocouple R,S:	0,1% o.r.	1°C beyond 250°C	0,01% /°C
Thermocouple B (3):	0,1% o.r.	3°C beyond 600°C	0,01% /°C
Comp. Cold junction:	< 2 °C between 10 and 40 °C ambient.		
Ambient conditions:	Temperature: 0..55°C, min. humidity: 30%, max 90% at 40°C non-condensing		
Protection rating:	IP20		
Weight, dimensions:	140 g., 100 x 112 x 17,5 mm		

SENECA MI000664-I/E ENGLISH - 1/8

Standards:	The instrument complies with the following standards: EN50081-2 (electromagnetic emission, industrial environment) EN50082-2 (electromagnetic immunity, industrial environment) EN61010-1 (safety) All the circuits must be provided with double insulation against circuits under dangerous voltage. The power supply transformer must comply with EN60742 standards for insulation transformers and safety transformers. Notes: - Use with copper conductor. - Use in Pollution Degree 2 Environment - Power Supply must be Class 2. - When supplied by an Isolated Limited Voltage/Limited Current power supply a fuse rated max 2.5 A shall be installed in the field
------------	--

- (1) influence of the resistance of the 0.5uV/ohm cables.
- (2) for any electromagnetic interference present
- (3) field measurable from 362°C 1800°C

INSTALLATION

The module has been designed for vertical installation on a DIN 46277 guide.
For optimal operation and long life, adequate ventilation must be provided for the module(s), avoiding positioning channels that obstruct the ventilation louvers.
Avoid fitting modules above equipment that generates heat; you are advised to fit them at the bottom of the panel.

HARSH OPERATING CONDITIONS:

When the modules are fitted side by side it may be **necessary to separate them by at least 5 mm** if the panel temperature is above 45°C and operating conditions are harsh.

- The following constitute harsh operating conditions:
- High power supply voltage (> 30Vdc / > 26 V AC)
 - Power supply for sensors with high consumption (> 20 mA).


NOTE: Use of the DIN guide connectors supplied on request ensures practical fitting and correct ventilation of the modules, in addition to reducing the number of electrical cables.

SENECA MI000664-I/E ENGLISH - 2/8

ELECTRICAL CONNECTIONS


POWER SUPPLY

The power supply voltage must be between 19 and 40 Vdc (any polarity) or 19 and 28 V AC; see also section **INSTALLATION**.
The upper limits must not be exceeded as this can seriously damage the module.



The power supply source must be protected from any failures in the module by means of a suitably sized fuse. The module can be powered via the DIN guide connectors.

MEASUREMENT INPUTS



NOTE 1: to avoid measurement errors caused by external disturbances are recommended short-circuit the thermocouple input channels not used.

NOTE 2: because the negative pole of the inputs is shared, the module cannot be connected to thermocouples that are not provided with insulation against the metal parts of the systems in which they are installed.


PLC INTERFACE

The PLC interface is based on three PNP-type signals suited for connection to most PLCs available in the market.
The interface is composed of a CLOCK signal generated by the PLC (transistor output), a DATA signal and STROBE signal generated by the module. At each program cycle, the PLC switches a CLOCK signal (see time diagram); the module, in turn presents a bit sequence of the max. 80 foreseen, 16 for each complete datum on the DATA output.
The module also generates a STROBE signal towards the end of the bit sequence that informs the PLC that the data are complete; the PLC must enter in a scanning register the status of the DATA signal corresponding to the negative commutation of the CLOCK signal (in this moment, the signal is certainly valid, also bearing in mind the time of the input's delay. When the STROBE signal is positive, the data are complete and can be memorised.
In this way any PLC can easily read the 4 analogue channels available with refresh times comparable to the module's own acquisition times. The acquisition time can be calculated as follows: PLC cycle time x the number of channels x 32; if the cycle time is 5 ms for example, the acquisition time will be 640 ms.

SENECA MI000664-I/E ENGLISH - 3/8


The programming necessary for the PLC is extremely reduced: the SIEMENS S7-200 PLC requires one 10 lines of Ladder Diagram (see enclosure) in order to read the analogue inputs; this corresponds to approx. 187 byte of programming space.
It is not necessary to read all the channels: the Z-PROG programming tool can be used to decide which channels to be sent to the PLC. The tool also permits the selection of the module's various operating modes: field of measurement, filter, type of serialisation, type of datum sent to the PLC, etc.

PLC CONNECTIONS

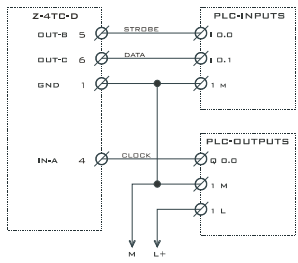

Although the connections indicated regard a SIEMENS S7-200 CPU 224-DC/DC/DC PLC in particular, other PLCs can also be used provided that their inputs are fast enough (< 2 ms) and their outputs are transistor and not relay type.

TIMING DIAGRAM

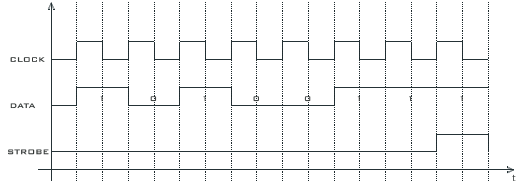

SENECA MI000664-I/E ENGLISH - 4/8

PROGRAMMING AND DESCRIPTION OF INTERNAL REGISTERS

IMPORTANT
A program known as Z-PROG can be downloaded from the www.seneca.it site for the initial programming and testing of the product

The Z-PROG programming tool permits the setting of the Z-4TC-D module for operating adaptation to the needs of the user. The use of the tool requires the connection cable between the PC and the module which can be purchased directly from SENECA (code Z-PC). The cable jack must be inserted in the outlet on the front of the module; during programming, the module must be switched on.

The table below describes the internal registers that can be modified and/or read with the use of the tool; some of these are the same that are read by the PLC, and the latter are distinguished by the symbol which indicates that they can be read by the PLC. For reasons of space, the registers for channels 2,3,4 have not been listed because they are the same for all the channels

Input 1.InType	Type of input for channel 1; 0 = mV, field of measurement: 80..+80mV = -16000..+16000. 1 = TC J, field of measurement: -200.0.1150°C 2 = TC K, field of measurement: -250.0.1300°C 3 = TC R, field of measurement: 0.0.1750°C 4 = TC S, field of measurement: 0.0.1750°C 5 = TC T, field of measurement: -200.0.400°C 6 = TC B, field of measurement: 362.0.1800°C 7 = TC E, field of measurement: -200.0.1000°C 8 = TC N, field of measurement: -200..1300 °C
Input 1.Filter 0.6	Measurement filter, values can be set from 0 to 6, corresponding to: 0 = no filter, 1 = minimum filter.... 6 = maximum filter
STATUS	Status indicator flags, see below for details.
Input 1.Reading	Channel 1 measurement value: in tenths of degrees C if the input is TC, 1 unit = 5 uV if the input is mV.

Details of the register


STATUS: This register must be considered in binary format, i.e. each active bit (=1) of the register corresponds to an error or warning status. The table shows the functions associated with each bit.

SENECA MI000664-I/E ENGLISH - 5/8

0	None
.1	None
.2	=1: EEPROM programming error. Active if the last programming of an EEPROM register has failed.
.3	=1: data programming error. Active if the setting of the type of input or value of the filter is not included in the range of acceptability.
.4	None
.5	None
.6	None
.7	None
.8	=1: if the channel 1 measurement is higher than the maximum value permitted for the type of input selected (overflow)
.9	=1: if the channel 2 measurement is higher than the maximum value permitted for the type of input selected (overflow)
.10	=1: if the channel 3 measurement is higher than the maximum value permitted for the type of input selected (overflow)
.11	=1: if the channel 4 measurement is higher than the maximum value permitted for the type of input selected (overflow)
.12	channel 1 input open (Burn-out)
.13	channel 2 input open (Burn-out)
.14	channel 3 input open (Burn-out)
.15	channel 4 input open (Burn-out)

SENECA MI000664-I/E ENGLISH - 6/8

As regards PLC interface, the panel **PLC Interface Settings** can be used to select the channels to be read by the PLC, the type of datum (Scaled or Raw), the inversion of the bit sequence (normally the first is the most significant bit), and he increase of the conversion speed.
Consult the on-line guide for the use of the tool.

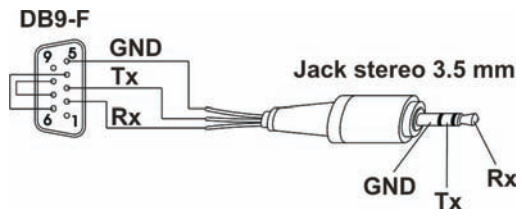


Z-PC cable creation diagram for programming by PC. This cable can be ordered as an accessory (code PM001600).

Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs)

This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.

SENECA MI000664-I/E ENGLISH - 7/8

OVERALL DIMENSIONS

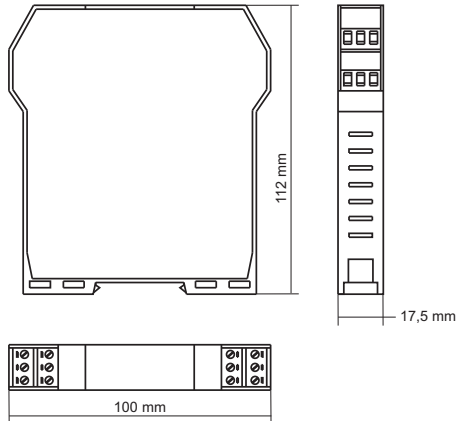

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice. Content of this documentation is subject to periodical revision.

CSQ **IQNet**
ISO9001-2000

SENECA s.r.l.
Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY
Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287
e-mail: info@seneca.it - www.seneca.it

SENECA MI000664-I/E ENGLISH - 8/8