

General Description

The K109LV instrument is a three points galvanic insulator, with input on high sensitivity voltage, and active output. The instrument is able to acquire low quantity direct voltage signals, e.g. those coming from a current shunt. It has 15 input scales, which can be selected by a DIP-switch.

Furthermore, it has the following characteristics:

- Detection of shunt release.
- Programmable rejection for 50 Hz or 60 Hz of mains power supply.
- Additional filter to stabilise readings.
- Input capacities can be set as bipolar or monopolar.
- Inverted output scales.
- Input overloading up to ± 50 V.

The module's main features are its compact size (6.2 mm), attachment to a 35 mm DIN rail, bus-conductor power supply option, quick connection by spring terminals and easy configuration in the field by DIP-switch.

Technical Features

Power Supply :	19.2..30 Vdc.
Consumption :	max 22 mA at 24 Vdc (with output at 21 mA and indicator light ON).
Dissipation :	< 600 mW.
Polarity of Input Capacities :	Can be set as bipolar or monopolar.
Input (Terminals: 3 - 4) :	Capacities: 25 mV, 50 mV, 60 mV, 75 mV, 80 mV, 100 mV.
Input (Terminals: 2 - 4) :	Input Impedance: 50 k Ω . Capacities : 120 mV, 150 mV, 200 mV, 250 mV, 300 mV, 400 mV, 500 mV.
Input (Terminals: 1 - 4) :	Input Impedance: 250 k Ω . Capacities : 1000 mV, 2000 mV.
Max Input :	Input Impedance : 1 M Ω .
CMRR ⁽¹⁾ :	± 50 V.
DMRR ⁽²⁾ :	> 160 dB, referred to the power supply and output side.
Voltage Output :	> 55 dB.
Current Output :	0.5 Vdc, 1.5 Vdc, 0..10 Vdc, 2..10 Vdc.
Output in case of over-range/fault:	Minimum load resistance 2 k Ω .
Maximum voltage :	0..20 mA, 4..20 mA, 20..0 mA, 20..4 mA.
Maximum current :	Maximum load resistance 500 Ω .
	According to setting (see <i>Output Limits</i> section).
	approximately 12.5 V.
	approximately 25 mA.

⁽¹⁾ The values are valid at the set rejection frequency, with the filter ON.
⁽²⁾ For disturbance values whereby the input signal peak does not exceed their acceptability.


Processing :	Digital, Calculation in floating-point 32 bit.
ADC :	14 bit on the total measuring range (bipolar).
Response time (10..90 %) :	At 50 Hz: max 25 ms without filter and 55 ms with filter. At 60 Hz: max 23 ms without filter and 51 ms with filter.
Transmission :	Optical-Digital.
Max Transmission error ⁽³⁾ :	For mA or 5 V output : 0,085% of the full scale value . For 10 V output: 0,075% of the full scale value .
Resolution :	Voltage Output: 1 mV, Current Output: 2 μ A.
Thermal Drift :	< 120 ppm/K.
Insulation Voltage :	1.5 kV between each group of ports.
Protection Index :	IP20.
Operating Conditions :	Temperature -20..+65 °C Humidity 10..90 % at 40°C (non-condensing). Altitude: up to 2000 m.a.s.l.
Storage Temperature :	-40..+85 °C.
LED Signalling :	Fault, Over-Range or incorrect setting.
Connections :	Spring terminals.
Conductor Section :	0.2..2.5 mm ² .
Wire stripping :	8 mm.
Box :	PBT (black colour).
Dimensions, Weight :	6,2 x 93,1 x 102,5 mm, 46 g.

Standards :	EN61000-6-4/2002 (electromagnetic emission, industrial surroundings) EN61000-6-2/2005 (electromagnetic immunity, industrial surroundings) EN61010-1/2001 (safety) All the circuits must be provided with double insulation from the circuits under dangerous voltage. The power supply transformer must be built to compliance with EN60742: "Insulation transformers and Safety transformers".
-------------	--

⁽³⁾ Referred to the physical full scale (see table **INPUT SIGNAL AND SCALE DETAILS** contained in the **SETTINGS OF THE DIP-SWITCHES** section). Precision is guaranteed with the shunt release detection function disabled, and after at least 3 minutes of operation.


Installation rules

This module has been designed for assembly on a DIN 46277 rail. Assembly in vertical position is recommended in order to increase the module's ventilation, and no raceways or other objects that compromise aeration must be positioned in the vicinity. Do not position the module above equipment that generates heat; we recommend positioning the module in the lower part of the control panel or container compartment. We recommend rail-type assembly using the corresponding bus connector (Code K-BUS) that eliminates the need to connect the power supply to each module.

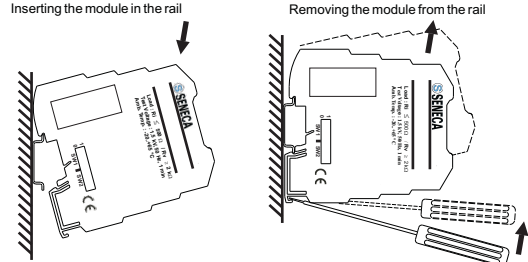

- 1 - Attach the module in the upper part of the rail.
 - 2 - Press the module downwards.
- 1 - Apply leverage using a screwdriver (as shown in the figure).
 - 2 - Rotate the module upwards.

Using the K-BUS connector

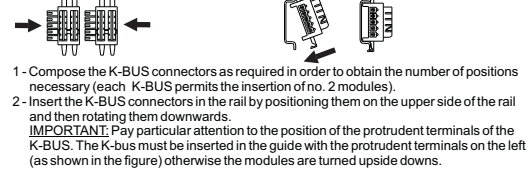

- 1 - Compose the K-BUS connectors as required in order to obtain the number of positions necessary (each K-BUS permits the insertion of no. 2 modules).
- 2 - Insert the K-BUS connectors in the rail by positioning them on the upper side of the rail and then rotating them downwards.

IMPORTANT! Pay particular attention to the position of the protrudent terminals of the K-BUS. The K-bus must be inserted in the guide with the protrudent terminals on the left (as shown in the figure) otherwise the modules are turned upside down.

- Never connect the power supply directly to the bus connector on the DIN rail.
- Never tap power supply from the bus connector either directly or by using the module's terminals.

SHUNT RELEASE DETECTION

A shunt disconnection detection function can be activated by the DIP-switch settings. It applies to the most sensitive inputs, which lead to terminals M2 and M3. When this function is enabled, shunt release is detected as a positive saturation of the input and is interpreted as a fault. The event is signalled visually by rapid flashing of the LED (see section: **LED Indications on the frontal panel**) and the output is taken to fault condition (to the value of the set Over-Range - see **Output Limits** section). Use of this function slightly degrades

SETTING OF THE DIP-SWITCHES

Factory setting
All the module DIP switches are at position 0 as default configuration. This set corresponds to the following configuration :

Input Signal	→ 0..60 mV
Bipolar input	→ No
50/60 Hz mains frequency Rejection	→ 50 Hz
Input Filter	→ Present
Shunt Detection	→ Not Activated
Output Signal	→ 4..20 mA
Over Range	→ YES: a 2.5% over-range value is accepted; a 5% over-range value is considered a malfunction.

It is understood that this configuration is valid only with all the DIP switches at position 0. If also one Dip is moved, it is necessary to set all the other parameters as indicated on the following tables.

Note: for all following tables:
The indication **●** indicates that the DIP-switch is set in Position 1 (ON).
No indication is provided when the DIP-switch is set in Position 0 (OFF).

INPUT SIGNAL AND SCALE DETAILS														
SW1			SW1			SW1			SW1					
1	2	3	4	1	2	3	4	1	2	3	4			
Measure F.S.		Physical F.S.		Terminal +	Measure F.S.		Physical F.S.		Terminal +	Measure F.S.		Physical F.S.		Terminal +
				Toward M4					Toward M4					Toward M4
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M3	●	●	●	●	M2	●	●	●	●	M2
●	●	●	●	M2	●	●	●	●	M1	●	●	●	●	M1

The physical Full Scale is shown in order to evaluate the error and the transmission resolution, in addition to the acceptability of the input and, therefore, the useful margin before a fault is signalled.

MONOPOLAR OR BIPOLAR INPUT	
SW1 5	● Bipolar
	● Monopolar

50/60 Hz Mains Frequency Rejection	
SW1 6	● 60 Hz
	● 50 Hz

⁽⁴⁾ The filter increases rejection at mains frequency disturbance, and stabilises reading, reducing measurement noise. It is preferable to always keep the filter ON, except in cases where maximum response speed is required.

SHUNT DETECTION ⁽⁵⁾	
SW1 8	● YES
	○ No

⁽⁵⁾ It entails an injection of current of less than 3 μ A, which can degrade the instruments precision, and applies to the inputs leading to terminals M2 and M3.

OUTPUT SIGNAL			
SW2 1	2	3	
●	●	●	0..20 mA
●	●	●	4..20 mA
●	●	●	20..0 mA ⁽⁶⁾
●	●	●	20..4 mA ⁽⁶⁾
●	●	●	0..10 Vdc
●	●	●	0..5 Vdc
●	●	●	1..5 Vdc
●	●	●	2..10 Vdc

⁽⁶⁾ They are inverted output scales, for which the fault is represented by the lower extreme.

OVER-RANGE (*)	
SW2 4	● YES: a 2.5% over-range value is acceptable; a 5% over-range value is considered a malfunction.
	○ NO: the malfunction alone causes a 2.5% over-range value.


(*) See the table below for the corresponding values.

Output Limits

The following are the off-scale programmable limits which are applied to the output signal:

Nominal Value	Over-Range ± 2.5 %	Over-Range ± 5 %
20 mA	20.5 mA	21 mA
4 mA	3.5 mA	3 mA
0 mA	0 mA	0 mA
10 Vdc	10.25 Vdc	10.5 Vdc
5 Vdc	5.125 Vdc	5.25 Vdc
1 Vdc	0.875 Vdc	0.75 Vdc
2 Vdc	1.75 Vdc	1.5 Vdc
0 Vdc	0 Vdc	0 Vdc

Electrical Connections

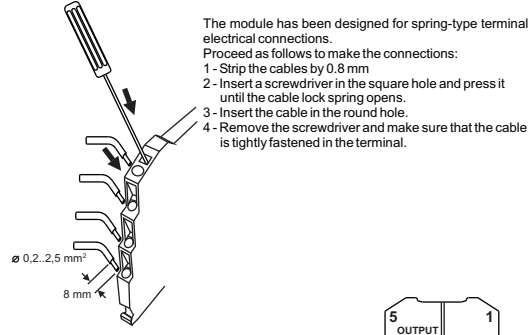

Power supply
There are various ways to provide the K Series modules with power.

- 1 - Direct power supply to the modules by connecting 24 Vdc power supply directly to Terminals 7 (+) and 8 (-) of each module.

- 2 - Using the K-BUS connector accessory for the distribution of the power supply to the modules via bus connector, in this way eliminating the need to connect power supply to each module.

The bus can be supplied from any of the modules; the total absorption of the bus must be less than 400 mA. Higher absorption values can damage the module. An appropriately sized fuse must be connected in series to the power supply.

- 3 - Using the K-BUS connector accessory for the distribution of the power supply to the modules via bus connector and the K-SUPPLY accessory for the connection of the power supply.


The K-SUPPLY accessory is a 6.2 mm wide module that contains a set of protections designed to protect the modules connected via bus against over-voltage loads. The bus connector can be provided with power using the K-SUPPLY module if the total absorption of the bus is less than 1.5 A. Higher absorption values can damage both the module and the bus. An appropriately sized fuse must be connected in series to the power supply.

Input

For the electrical connections, we recommend using a screened cable.

Details of terminals


Terminal 1: Input powered up to 2 Vdc (Physical full scale: 2 V and 1 V).
Terminal 2: Input powered up to 500 mV (Physical full scale: 500 mV and 250 mV).
Terminal 3: Input powered up to 100 mV (Physical full scale: 100 mV and 50 mV).
Terminal 4: Return (GND).

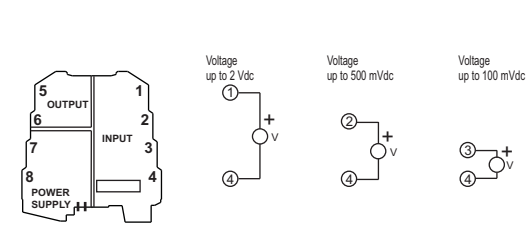

Output

Voltage connection - Current connection (applied current).

The use of shield cables is recommended for the electronic connections.

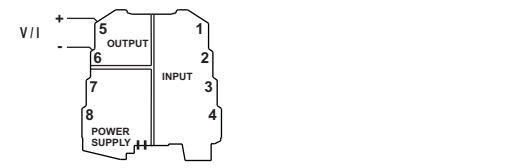

Note: in order to reduce the instrument's dissipation, we recommend to guarantee a load > 250 Ω to the current output.

LED indications on the frontal panel

Red LED	Meaning
Rapid flashing	Internal fault: power supply, offset or reference off limit, input acceptability exceeded. Internal error. Input overloaded. Release of shunt (if enabled).
Slow flashing	Function for detecting the disconnection of the shunt required for an input capacity, for which it is not available (M1).
Steady ON	Output limiting in progress (overcoming of the set over-range).

Behaviour due to fault or defect

Any defect causing the LED to flash rapidly, takes the output into fault condition, i.e. to the Over-Range value (2.5 % or 5 % according to the setting of the DIP-switches). For direct scales, the output takes on the Over-Range value corresponding to the maximum value, whereas, for the inverse scales (20..0 mA / 20..4 mA) it takes on the zero corresponding to minimum value. If slow flashing occurs, the output remains on zero. The acceptability of the input is obviously determined by the physical full scale for the selected scale.

Disposal of Electrical & Electronic Equipment (Applicable throughout the European Union and other European countries with separate collection programs)

This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.

This document is property of SENECA srl. Duplication and reproduction are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

ese-TCNet ISO9001-2000

SENECA s.r.l.
Via Germania, 34 - 35127 - Z.I. CAMIN - PADOVA - ITALY
Tel. +39.049.8705355 - 8705359 - Fax +39.049.8706287
e-mail: info@seneca.it - www.seneca.it